User Manual

Wireless Sewer Pipe Inspection Camera





SmartCam WiFi

Reminder ! Please read this user manual carefully before using the product.

Table of Contents

1. Product Instruction	3
2. App Installation	4
3. Connect To Your SmartCam Camera	4
4. SmartCam WiFi App Introduction	5
5. Packing List	13
6. Specifications	14
7. FAQS	15
8. FCC STATEMENT	16

1. Product Instruction



2. App Installation

Download The Smartcam WiFi App:By searching for SmartCam WiFi in the Google Play or Apple APP Store.



Requires IOS V11.2 or later



Available on the Google Play Store

Requires Android V6.0 or later



SmartCam WiFi

Note: On first use you need to give the App access to the gallery of photos and videos on your device to be able to allow you to save photos and videos.

3. Connect To Your SmartCam Camera.

3.1 Press the power switch button to turn on the power.

Note: When starting up, you need to press the power switch button for 3 seconds, the power indicator on the left side will first show green for about 5 seconds, and then off, after about 3 seconds, the power indicator on the left side will show green on, which means that the product is working normally.



Power button

power Led Charging Led

Note: Ensure the camera is charged.

3.2 Click on the SmartCam WiFi icon'

, the following dialog box is displayed.



3.3 Click on "ok", the following dialog box is displayed.

Settings WLAN	
WLAN	
√ 666	1 7 1
MYNETWORKS	
888	🔒 🛜 🚺
SmartCam-xxxxx	< 🛜 🛈
OTHER NETWORKS	
Aaa	ê 🛜 🕕
Bbb	ê 🛜 🚺
Other]

- 3.4 Search for a wireless name "Smartcam-xxxxxx" in the wireless listing and click to select it.(No other WiFi network is needed)
- 3.5 Return to the APP home screen to watch the video.



4. SmartCam wiFi App Introduction



Brightness

Light full

Adjust the brightness of the six white lights by moving the circular icon " on the left up and down. The lights are brightest when the circular icon is moved to the top and off when the circular icon is moved to the bottom. The six white lights can also be controlled by 25 percent or half of their brightness when the circular icon is moved from bottom to top or from top to bottom.

Light off

Record photos

Click on the Camera icon to take a photo. Photos are saved on Phone by default.

Record videos



0

Click on the Video icon to take a video. Videos are saved on Phone by default.

Gallery



Click on the "Gallery" icon to access all pictures and videos taken with smartCam.

click on the Gallery icon " [and the following interface will pop up:



If you want to delete all the photos and videos stored on Phone through the smartcam wifi, click the Delete icon "🗐" in the upper right corner of the interface. A dialog box will pop up asking you to confirm whether you want to delete them.



If you're sure you want to delete all the photos and videos, click the OK button. If you don't want to delete them, click the Cancel button.

View photos

Click on the photo file icon " 🕍 and the following interface will pop up:



You want to see that photo, just click on the photo above, and it pops up.

Delete photo

If you delete a photo, do the following:





3. Click on the blue circle in the top right corner of the photo you want to delete. The circle will turn blue and a white √ will pop up inside it. See the screen above. Click the Delete icon in the upper right corner of the interface again, and a dialog box will pop up asking whether you want to delete or not.



2. In the upper right corner of each video, a blue circle with a gray icon inside will be displayed, as shown in the screen above.



4. If you're sure you want to delete the photo, click the OK button. If you don't want to delete the photo, click the Cancel button.

View videos



Click on the video file icon "

'and the following interface will pop up:



Directly tap the video file you are watching in the above screen, and the video will pop up and play automatically.

Delete videos

If you want to delete the video, do the following:





3. Click on the blue circle in the top right corner of the video you want to delete. The circle will turn blue and a white √ will pop up inside it. See the screen above. Click the Delete icon in the upper right corner of the interface again, and a dialog box will pop up asking whether you want to delete or not.



2. In the upper right corner of each video, a blue circle with a gray icon inside will be displayed, as shown in the screen above.



4. If you're sure you want to delete the video, click the OK button. If you don't want to delete the video, click the Cancel button.

Help



Click on the "Help" icon to pop up the following interface:



Click on the "User Manual" icon and the user manual information will appear...

Picture still



Click on the palm icon will generate a still photo, allowing you to decide whether to save the photo.

Click on the palm icon and the following interface will pop up:



Click on the Save icon if you think the photo looks good, or click on the Cancel icon if you don't think it looks good.

Manual focus



By moving the orange circular slider below the MF icon, you can adjust the focal length of the lens.



Image before sliding MF slider icon

Battery Level Indicator



Settings



Through the setting interface, you can set the optical frequency, image display mode and meter counter display unit mode. At the same time, you can see the firmware version and APP version information of the product in the setting interface. Click the setting icon, and the following interface pops up:

5	Settings			
Light frequency:	50Hz			
Display Mode:	Standard			
Rotenc Unix:	Metre (m)		Display Time	
		Save		
1.10.20240105				T9:V1.02B20240105

Note: After modifying any function in the setting interface, you need to click the Save button, so that the function can be modified successfully.

Light frequency

It has two options for light frequency: 50Hz and 60Hz, as shown in the following interface.

5	;	Setting	S	
Light frequency:	50Hz			
Display Mode:	60Hz			
Rotenc Unix:	Metre (m)		Display Time	
		Save		
1.10.20240105				T9:V1.02B20240105

The default frequency is 50Hz. If the frequency is 60Hz in your area, please select 60Hz and click Save button.



Focus the image by sliding the MF slider icon

Display Mode

It has three display modes: standard, always up round and always up full screen, as shown in the following interface:



Standard Mode: the image on the screen rotates as the camera rotates. As shown in the following picture:



The image displayed with the Smartcam facing up.



The image displayed after the smartcam is rotated 180 degrees.

Always Up Round Mode: the image on the screen remains the right way up on the app display, regardless of the camera's orientation, And the video always appears round. As shown in the following picture:



The image displayed with the Smartcam facing up.



The image displayed after the smartcam is rotated 180 degrees.

Always Up Full Screen Mode: the image on the screen remains the right way up on the app display, regardless of the camera's orientation. As shown in the following picture:



The image displayed after the Smartcam is rotated 90 degrees.



The image displayed after the smartcam is rotated 180 degrees.

Rotenc Unix

Here represents the distance of the camera advancing or retreating through the glass fiber, which has two display modes of meters (m) and feet (ft), as shown in the following interface:

5		Settings	
Light frequency:	50Hz		
Display Mode:	Standard		
Rotenc Unix:	Metre (m) Foot (ft)	Display	Time
1.10.20240105		Save	T9:V1.02B20240105

Metre (m): The meter counter data are displayed in meters on the APP interface ,As shown in the following interface:



Note: The 2.18 meters displayed on the APP interface above means that the camera has moved 2.18 meters forward through the glass fiber.

Foot (ft): The meter counter data are displayed in feet on the APP interface ,As shown in the following interface:



Note: The 7.15 feet displayed on the APP interface above means that the camera has moved 7.15 feet forward through the glass fiber.

RESET: Click on RESET icon, the meter counter data will take the current position as the starting position to start counting again, as shown in the following interface:



If you are sure to restart the count with the current position as the starting position click on OK, otherwise click on Cancel.

Display Time

By setting the display time function, you can display the current time on the APP interface.



Click the "Display Time" button, and the following interface will display as follows:



Setting: There are two modes: enable and disable.

Enable: If you select "Enable" and then click the Save button, the current time will be displayed on the APP interface.

Disable: If you select "Disable" and then click the Save button, the current time will not be displayed on the APP interface.

Position

When the current time is displayed in the APP interface, there are four positions displayed: Top left corner, Top right-hand corner, Bottom right-hand corner and left lower corner.



Top left corner: Indicates that the current time is displayed in the top left corner of the APP interface.

Top right-hand corner: Indicates that the current time is displayed in the Top right-hand corner of the APP interface.

Bottom right-handcorner:Indicates that the current time is displayed at the Bottom right-hand corner of the APP interface.

Left lower corner: Indicates that the current time is displayed in the left lower corner of the APP interface.

Color

This refers to the font color that displays the current time in the APP interface. There are 16 colors available: Aqua, black, blue, brown, Dodge Blue, gray, green, khaki, light green magenta, orange, pink, red, Slate blue, white, yellow.



Font Size

This Refers to the font size that displays the current time in the APP interface. There are small, middle and big three formats.



For example, the current time is displayed in the Top left corner of the APP interface, the font color is white, and the font size is middle. Then click the Save button. The APP interface is displayed as follows:



App Version

1.5.20240125 in the lower left of the Settings screen is the version of APP smartcam wifi. This version is constantly changing.

Firmware Version

T9:V1:02B20240125 in the lower right corner of the Settings screen is the firmware version of smartcam wifi product. This version number will change after the product firmware upgrade

OSD

It is a function set for the convenience of users to record some information. Click on OSD icon to pop up the following interface:

ок	OSD Setting: 💿 Enable	O Disable		Cancel
Position: Top left corner	Color: Aqua		Font Size:	Middle

OSD Setting: There are two modes: enable and disable.

Enable: After selecting Enable, you can type the text you want in the white box, and then click the ok button, and the text will be displayed on the APP interface. If you do not want to display the text, click the Cancel button.

Note: In the white box, limit each line to no more than 50 characters, no more than 10 lines, and no more than150 characters in total.

Disable: After selecting Disable and then clicking the ok button, the APP screen will not display the text in the white box.

Position: This refers to the position of the text in the white box when displayed in the APP interface. There are five types: Top left corner, Top right-hand corner, Bottom right-hand corner, Left lower corner and Center.



Top left corner: The text in the presentation box is displayed at the top left of the APP interface.

Top right-hand corner: The text in the presentation box is displayed at the top right of the APP interface.

Bottom right-handcorner: The text in the presentation box will be displayed at the bottom right of the APP interface.

Left lower corner: The text in the presentation box will be displayed at the bottom left of the APP interface.

Center: The text in the presentation box will be displayed in the center of the APP interface.

Color

It refers to the font color of the text in the white box of the OSD menu displayed in the APP interface. Thereare 16 colors available: Aqua, black, blue, brown, Dodge Blue, gray, green, khaki, light green magenta, orange, pink, red, Slate blue, white, yellow.



Font Size

It refers to the font size of the text in the white box of the OSD menu displayed on the APP interface. There are small, middle and big three formats.

ок		OSD Setti	ng: 🔘 E	nable	O Disable		Cancel
Position:	Top left corner		Color:	Aqua		Font Size:	Small Middle Big

For example, type in the white box: There is a crack in the top left of the pipe. position Select center, the font color is white, the font size is middle.

ОК	OSD Setting: 💿 Enable	O Disable	Cancel
Position: Top left	corner Color: Blue	Font Size:	Middle
There is a	crack in the top left	of the pipe.	

and then click the OK button. The APP interface will display as follows:



Note: After making any operational changes, remember to click OK.



When the camera is charged, the icon" **I** is displayed on the APP interface, and the camera can be fully charged in 60 minutes. as shown in the following interface:



Record video with sound



You can store both sound and video in a smart device.

It can provide customers with accurate inspection reports.

Digital pinch zoom



Zoom in and out of an image by using two fingers to drag in and out of the smartcam wifi app screen. It can increases visibility and precision on inspections.



The video image is displayed normally.



Zoom in to display the video image.



Wireless Smart Ir	spection Camera Specifications
Sensor Type	1/3" CMOS
Image Resolution	720p (1280 x 720)
Lens	manual focus
Viewing angle	Horizontal:88°, Vertical:48°
Focal length	F=2.4mm
Aperture	F2.0
Wireless Range	up to 65 feet (In line of sight)
Frequency	2412-2462MHz
Operating Time	approx 9 hours (LEDs full) to 11hours
Charging Time	4hours fast charge
Battery Capacity	10000mAh
Battery Type	lithium polymer
Charge Voltage	DC 5V
Adjustable bright white LEDs	12 white - control functionality via the app (off, 25%, half, full)
Waterproofing grade	IP67, When the back cover is tightened, it is dustproof and waterproof.
Always up viewing function	When the camera rotates, The image can be set to way up all the time
Record video with sound	Yes
Built-in meter counter	Yes
Glass fiber line length	98.4 feet
Automatic wire locking mechanism	Yes
Charge Port	USB Type C
Output Port	USB
Operating Temperature	32 °F to 104 °F
Storage Temperature	-4 °F to 122 °F
Dimensions of the small skid	ф1.57" X 1.68"
Dimensions of the big skid	φ 3 .15" X 1.73"
Camera Dimensions(W x D x H mm)	Φ 1 .1" X 1.62" (The size of the spring included in the camera is $\phi1$.1" X 6.15")
Product Dimensions(W x D x H mm)	19.7" X 15" X 5.2"
Product Weight	15.7 LBS

7. FAQS

1. Q: How many smart devices can connect to a camera to watch video at the same time?

A:There is no limit on the number of smart devices connected to watch videos, but the more smart devices connected to watch videos at the same time, the slower the video will be. It is recommended not to have more than two smart devices connected to the smartcam to watch videos at the same time.

2. Q: What does it mean that the video is striped?

A: It's because the battery is low. Please charge the camera right away.

3. Q: I can connect to the WiFi, but it won't show an image in the iOS App?

It shows an error message Error(100)(Connect the device time out!)

A:Go to Settings-> Mobile Data-> Scroll down to find the SmartCam WiFi App and turn off to prevent the App trying to use mobile data.

4.Q: I can connect to the WiFi, but it won't show an image in the Android App? It shows an error message Error(100)(Connect the device time out!)

A: Go to Settings-> Connections-> Data Usage-> Mobile Data only apps-> Scroll down: to find the SmartCam WiFi App. Turn off background data to prevent the App trying to use mobile data.

5.Q: Can the smartcam cameras work underground, underwater or inside metal pipes?

A:Yes.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.