# **Packing List**

Item	Name	Quantity
1	Camera head	1pc
2	Cable reel	1pc
3	DVR control unit	1pc
4	Camera skid	1set
5	32G USB disk	1рс
6	Charge adaptor	1pc
7	Waterproof ring	2pcs
8	Earphone	1pc
9	User manual	1pc

# AHD PT CAMERA INSPECTION SYSTEMS WITH DVR AND MANUAL FOCUS ASSEMBLY AND OPERATING INSTRUCTION



Read these instructions completely before operating the device PLEASE CHARGE BATTERY FIRST BEFORE USE!

#### **Contents**

Specification	2
Camera head	4
How to install camera skid	5
Control box panel	5
Remote controller	7
Cable reel & Meter counter	8
Control panel basic operation	9
Switch power supply between charge and battery	10
Charge the battery	10
Wireless keyboard operation instruction	11
Recording video & photography function instructions	11
DVR menu operation instruction	12
Troubleshooting guide	19
Packing List	20

#### **Attention**

- 1) Please read the user manual carefully,
- 2) Please format the USB flash disk or USB hard disk on the DVR control box before first use the product
- 3) Using wireless keyboard, please make sure the battery for keyboard is full. If battery is low, it needs to change a new 7<sup>th</sup> battery.
- 4) Using original charger adaptor to charge battery or support unit work.

#### **Troubleshooting guide**

Q: All parts are connected well ,but there is no image on the screen.

A:



Find 1m test cable, connect camera to control box directly, please check if the camera has image.

#### Q: I can't typewrite words

**A:** 1. Check the wireless keyboard battery is full or not.

2. Check the wireless keyboard receiver if it is inserted well .

If not , please restart the system after reinserting

3. Please press below keys on the keyboard

**F8----**Display the character

**F9---** Hide the character

F10-- Clear all characters

#### Q:The control box can't read USB flash disk

**A:** Please use another USB flash disk to test. If the product still can't read this , please contact with us.

Q: The meter counter is not accurate

A: Please check if the counter value is correct or not.

Video clip time: 1 MINUTE / 5 MINUTE / 10 MINUTE

15 MINUTE / 30 MINUTE / 60 MINUTE

Default value: 30 MINUTE

FRAME RATE:NTSC 30FPS / PAL 25FPS

Video Quality: It has 5 options. Usually we choose Level 3.

The level is bigger, the video resolution is higher

Compress:H265

Photo Quality: High / Middle / Low

Default Value : High

Record Mode: Manual / Auto

Default Value : Manual

Overwrite:OFF/ON
Default Value : OFF

## **Specification**

Monitor		
Screen size	8 inch LCD IPS screen	
Display Ratio	16:9	
Resolution 1920x1080		
Menu	Chinese English and others	
Sunshade function	Yes	
Audio power amplifier		
Power Amplifier	Stereo Class-D Audio Power Amplifier	
Power	3W*1	
HD DVR		
	video	H.264 encode, MP4 format
Support playback file format	Audio	audio and video
	Picture	JPEG
Audio input	Built-in Microphone	
Video input	AHD analog high-definition signal(suport	
Signal input	CAM	
Video system	AHD PAL、AHD NTSC(Support CVBS	
Video Input	Stereo aduio output (Internal Audio or	
Video Output	Composite video signal output	
Power support		
External charge	DC12V (Input voltage AC 100V~240V, Output voltage DC:12.5V, Current 3000mA)	
Battery	11.1V 7000mA/H	
Video input Signal input Video system Video Input Video Output  Power support  External charge	Built-in Microphone  AHD analog high-definition signal(suport  CAM  AHD PAL、AHD NTSC (Support CVBS  Stereo aduio output (Internal Audio or  Composite video signal output  DC12V (Input voltage AC 100V~240V, Output voltage DC:12.5V, Current 3000mA)	

2

17

Power	20W (Max)		
Battery charge time	8hours		
Battery work time	6 hours		
Pan Tilt camera head with	Pan Tilt camera head with manual focus (512hz transmitter option)		
Camera Diameter	Dia.33mm x L225mm		
View range	+/- 180°, rotation endless (slip ring)		
Lighting	4pcs white LEDS		
Camera Sensor	1/3 CMOS,1.3MP 960P		
Operating temperature	5°C ~ 50°C		
Camera housing material	304# Stainless steel		
Waterproof	IP68		
Cable wheel			
Special gold point touch connector to camera			
Fiberglass rod push cable Ø7mm			
Cable length:   60 meters			
Other function			
Meter counter	Feet and Meter switch. Display on the screen		
Keyboard	Support wired and wireless keyboard.		





Adjust the LCD screen brightess, Contrast

Default resolution:1280x720\_60

Usually we suggest the customers don't change these value

# **RECORD Setting**

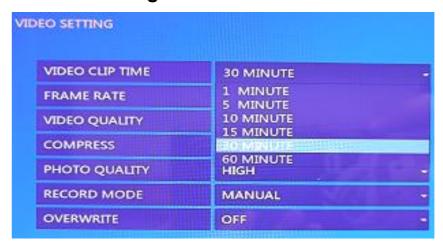

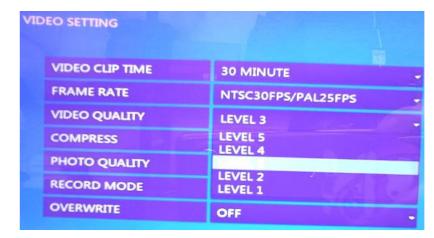



Press UP/Down/Left/Right arrows to set the date and time. Press"Save "to save the setting



For date format, it has 3 options

#### **IMAGE SETTING**



#### **Know Your Device**


#### Camera head

- 1. White LED lights (4 PCS)
- 2. Lens
- 3. Tilt rotation axis
- 4. Aluminum housing
- 5. Camera rear-end

# Camera skids

It includes below items.


2pcs/set (Diameter 65mm and Diameter 105mm)

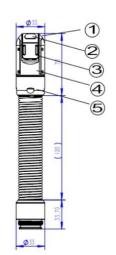




15

#### How to install camera skid

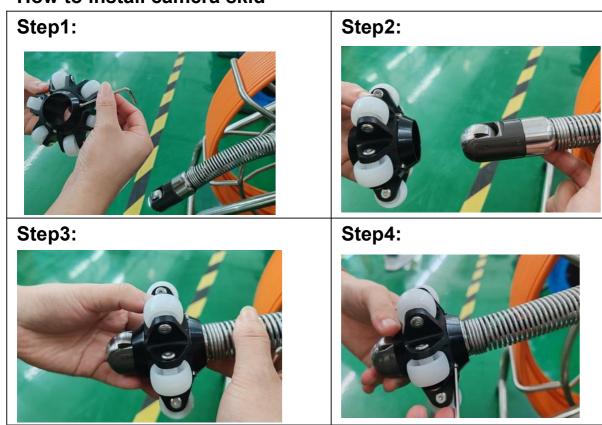

5

2) **ENCODER:** Set the value to get the accurate meter counter

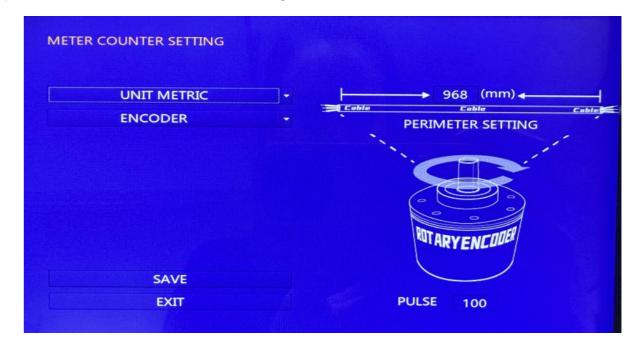

14

The PREMITER SETTING value is "968".

3) **DISK:** Format the USB flash driver.



The default value is "DISK1".

- 4) **RESET:** Restore the factory default Settings
- 5) **TIME SETTING:** Setting the time,date

Press the "UP" and "DOWN" arrows to select files

Press the "LEFT" and "RIGHT" arrows to turn pages,

Press"OK/REC " button to play the file, "STOP/DELETE "

button to delete the file.

2.PHOTO: Playback the picture file

**3.SYSTEM:**Setting language,date,time ...

4. IMAGE: Image setting, such as CVBS out, HDMI

Resolution, brightness, chroma, contrast, noise reduction

**5.RECORD:** Video setting, such as video clip time, frame rate, compress, photo quality, record model, overwrite.


## **System Setting**



1) **LANGUAGE:** Setting the menu language.


The box has 9 languages.(English,Chinese,French, Espanol German,Polish,Korea,Russian and Italian.

#### **DVR Control Unit**

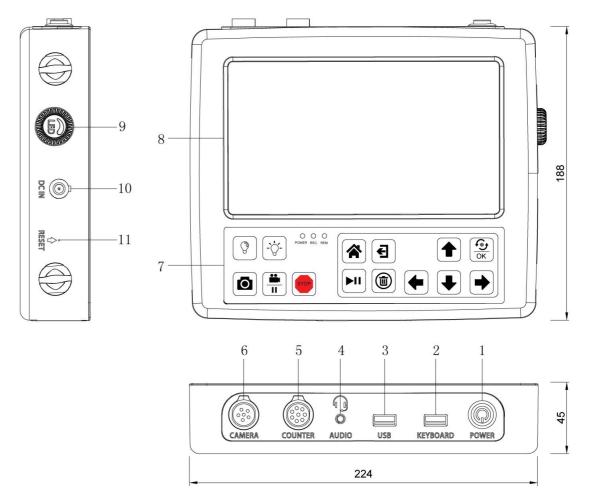

No	Name	Function	How to use
1 POWER	DOWED	On/Off	Press the button for 3 seconds to
	POWER		turn on /off the control box
1	2 KEYBOARD	Connect wireless	Insert 2.4G wireless keyboard
		/wired keyboard	adaptor
		Connect USB disk	Insert external USB disk to record
3	USB		and save the video& picture files.
3	3   036		Please don't remove the USB
			flash disk when it is recording.
4	AUDIO	Earphone/Microphone	Insert the 3.5mm earphone

5	COUNTER	Meter counter	Use 8pin link cable,one port to "COUNTER"port, the other to cable reel "Meter counter port".
6	CAMERA	Signal input	Connect 6pin link cable to cable reel
7	CONTROL PANEL	DVR MENU	Details reference picture(1-1)
8	MONITOR	Display the image	8inch HD screen ,1280x720 resolution
9	LED DIMMER	Adjust the camera LED brightness	Adjust 18mm, 23mm,29mm,40mm and 55mm camera LED brightness
10	DC IN	Charge for the battery	Connecting extra charge adaptor
11	RESET	Restart the DVR unit	When the system is halted

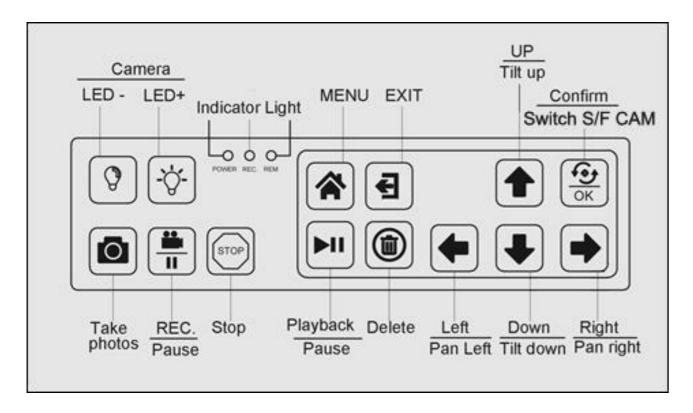

#### **DVR** menu instructions

Press menu button to enter the main menu



1. Video: Playback the video file



**HD DVR recording video & photography function instructions** 



#### Operating instruction

1.Insert the USB disk to USB port.

2.**Record the video:** press "OK/REC" button to start, and press "STOP" button to stop recording.

3.**Record the auido:** Insert the external micrphone to MIC port. Press down the MIC button. When it is recorded the video, you can record the audio at the same time.

4.Take pictures: Press remote control "SNAP" button or control box "P/P" to take picture (No matter whether it is recording or not)

5. Press MENU button to enter the main menu ,and choose "VIDEO" to play the video.

6. Press MENU button to enter the main menu ,and choose "PICTURE" to scan the pictures.

7. Rotation camera head: " ← " / " → "

8.focusing: Press "




" Then press " ← " / " → "



Button	Function
REC	Recording video
SNAP	Screenshot / Photography
	Up / Zoom in
•	Down / Zoom out
4	Left/Backward(Playback Model)
	Right/Forward(Playback Model)
OK	Confirm
MENU	DVR menu
STOP	Stop recording
ESC	Exit
PLAY	Playback the video
DEL	Delete the video or picture file

# Meter counter device part

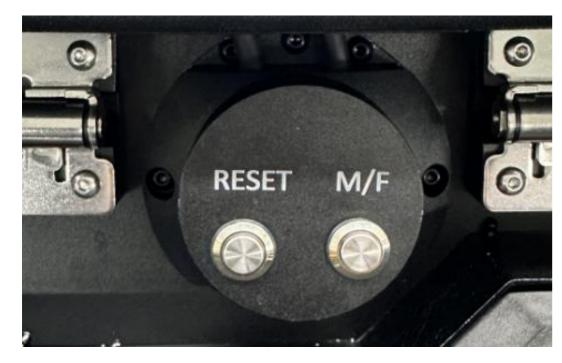

No.	Function	Details
1	RESET	Press this button ,the counter is zero
2	M/F	Switch Meters and Feet ; Default value is Meter

# Cable brake








Enabled

# Keyboard

1.Flip over to the back of the keyboard, insert the battery, and remove the USB connector



2..Insert the USB connector into the keyboard socket

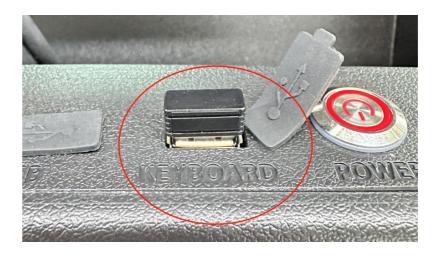

**F8----**Display the character

**F9---** Hide the character

F10-- Clear all characters